


Connection Diagram of Iotron™ pH / ORP / ISE Sensors **Without** Preamplifiers to Rosemount 1056 pH / ORP / ISE Analyzers

Connection from Iotron™ Sensor to Terminal Block in Rosemount Transmitter

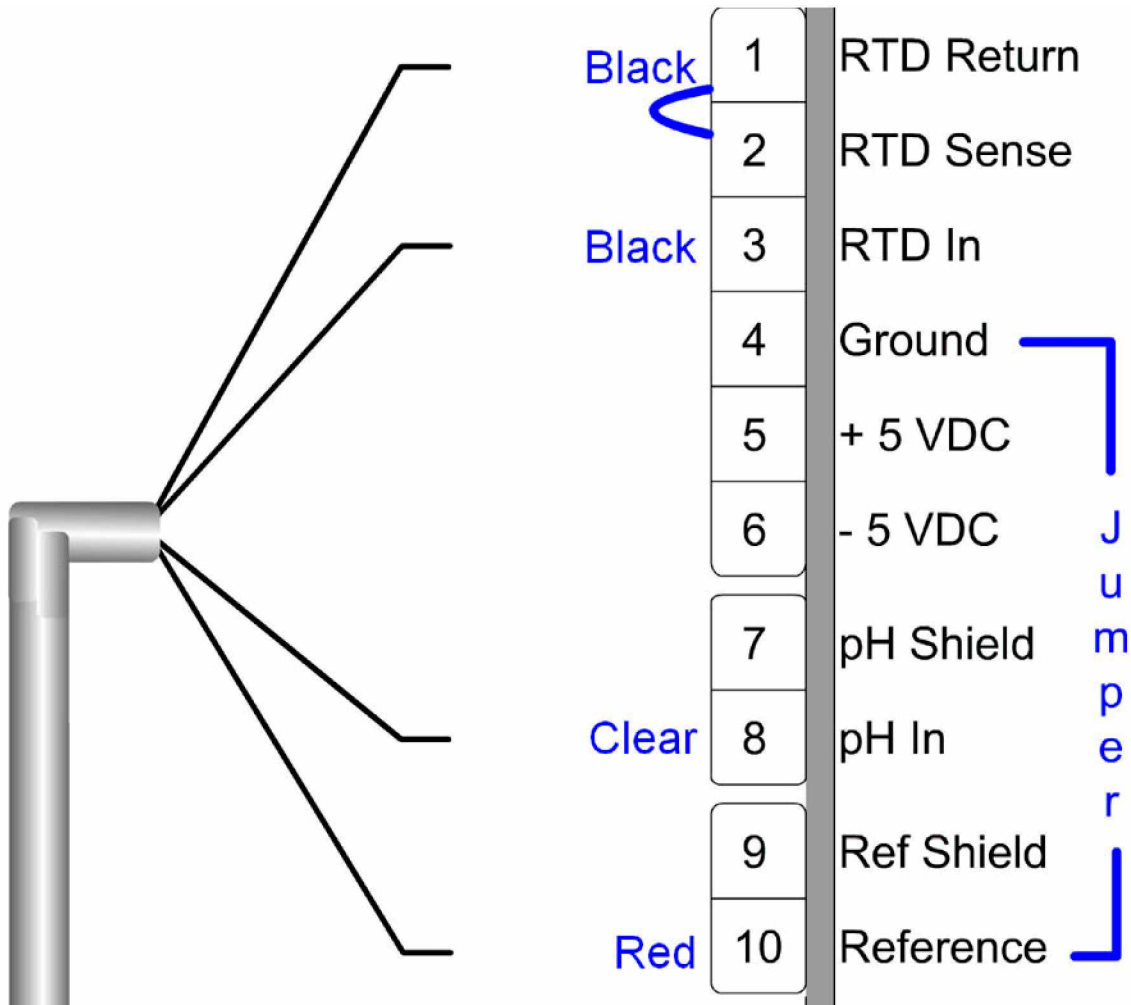

Note 1: The temperature compensation element is 100 or 1000 Ohm Platinum (autoswitched).

Note 2: For ORP and Ion Selective Sensors, please put the active signal (clear) to terminal 8 (indicated as pH In).

Note 3: Terminals 4 & 10 and terminals 1 & 2 must be tied together to satisfy the analyzer input requirements and disable the reference diagnostic features (pH glass diagnostics should still be available).

Note 4: For Dual Channel Analyzers, please ensure that the proper type of sensor is connected to the proper input board.